


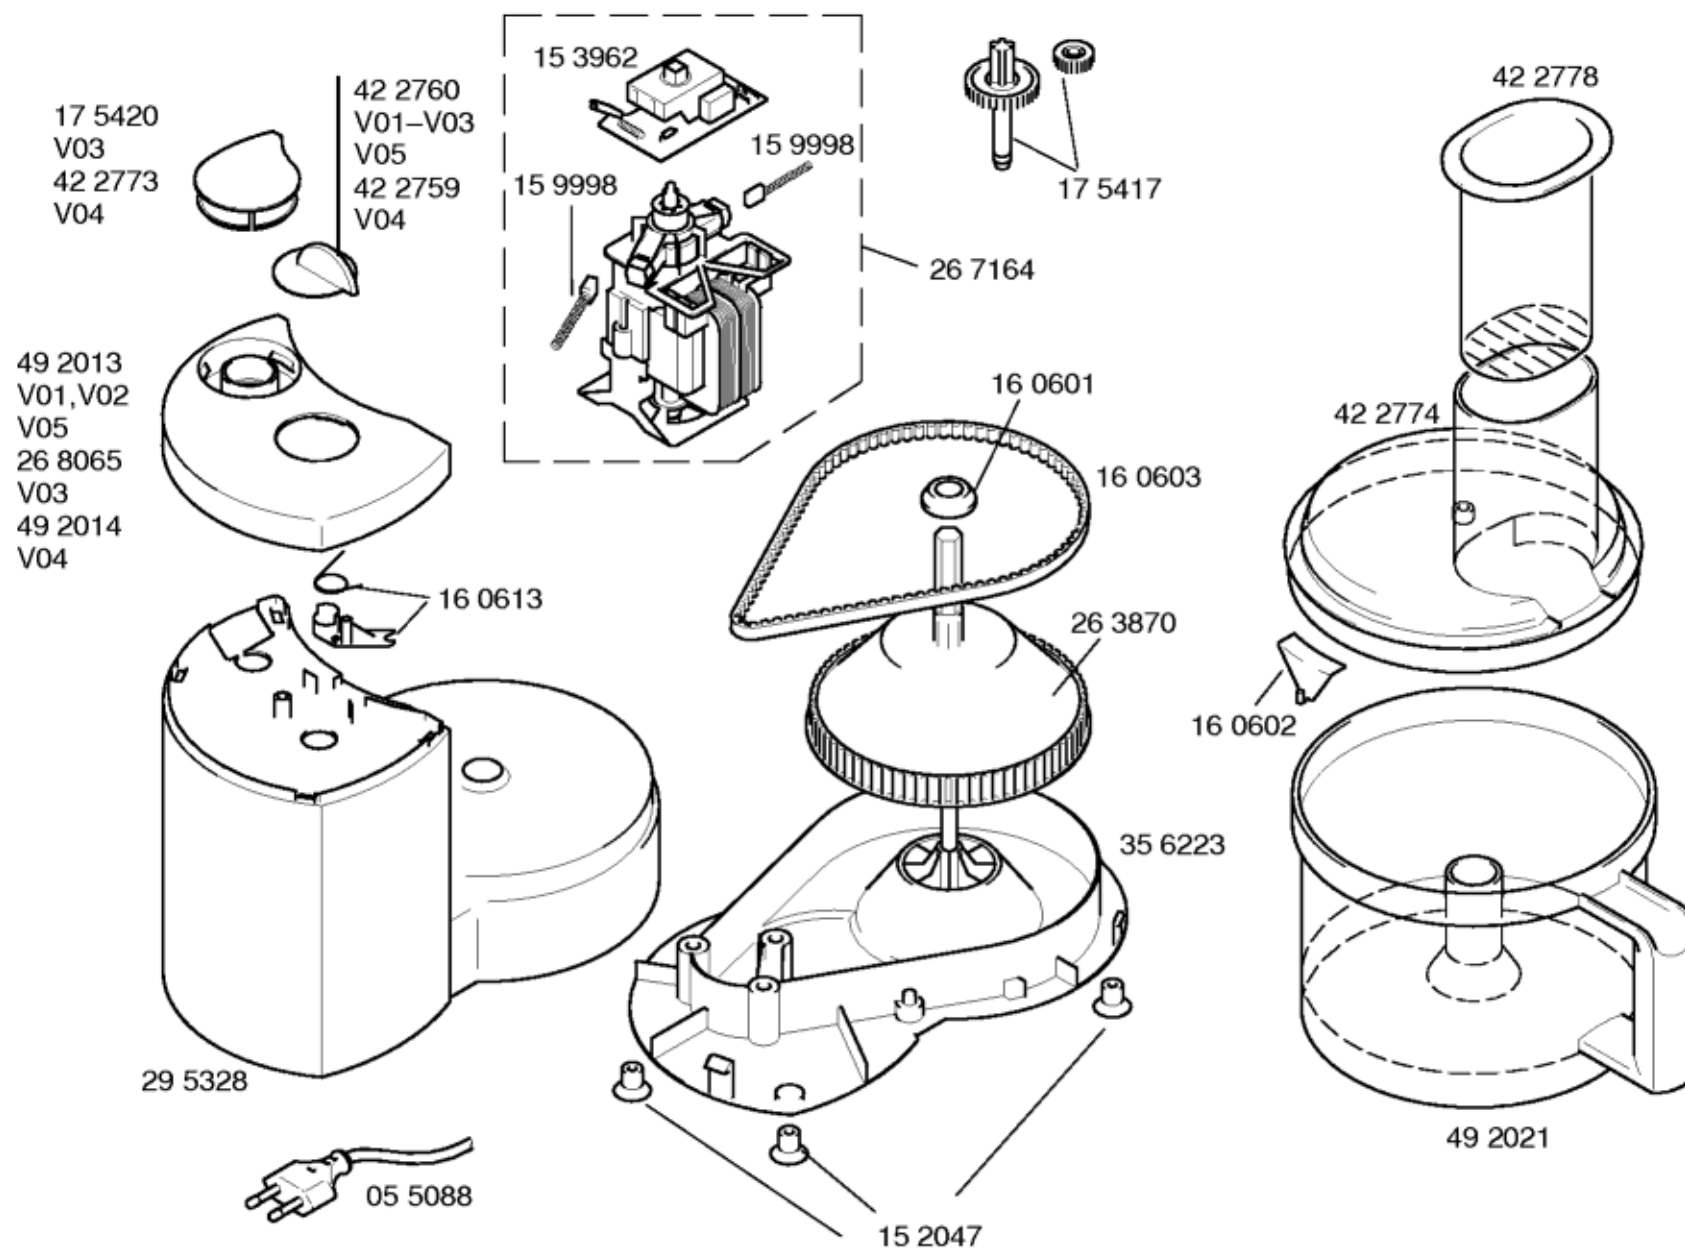

Gebrauchsanweisung
58 8141
V01, V02, V05
(ar, bg, da, de, el, en, es
fi, fr, hu, it, nl, no, pl, pt,
ru, sv, tr)
58 8142
V03, V04




Zubehör:

Saftzentrifuge
MZ 20361


Zitruspresse
MZ 20271

Pommes-Frites-Scheibe
MZ 24582


Reibscheibe grob
MZ 24627

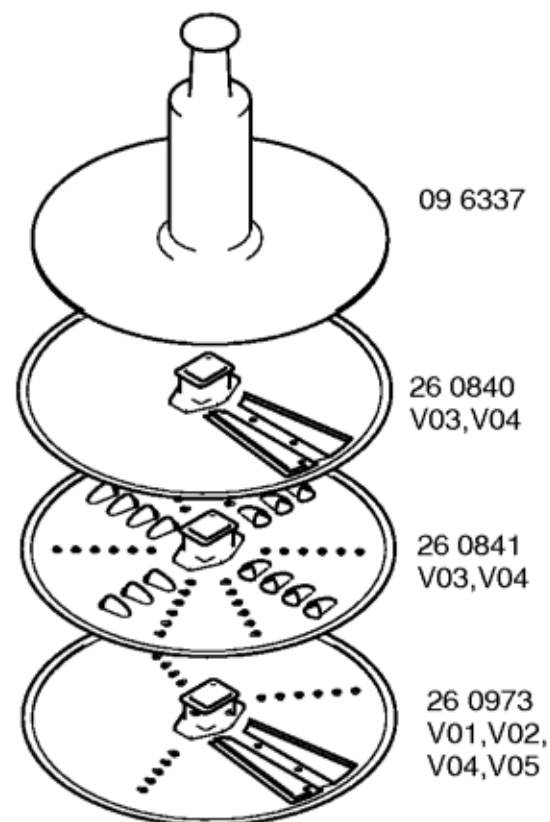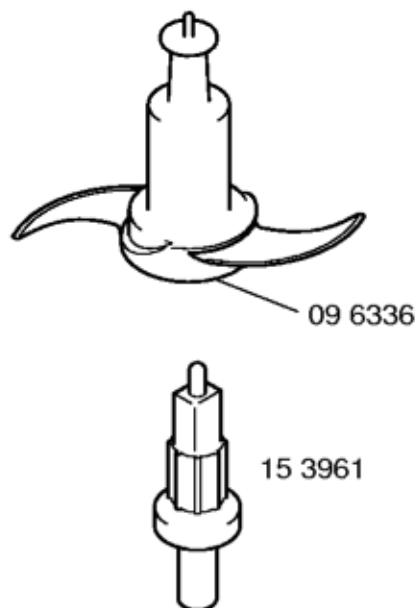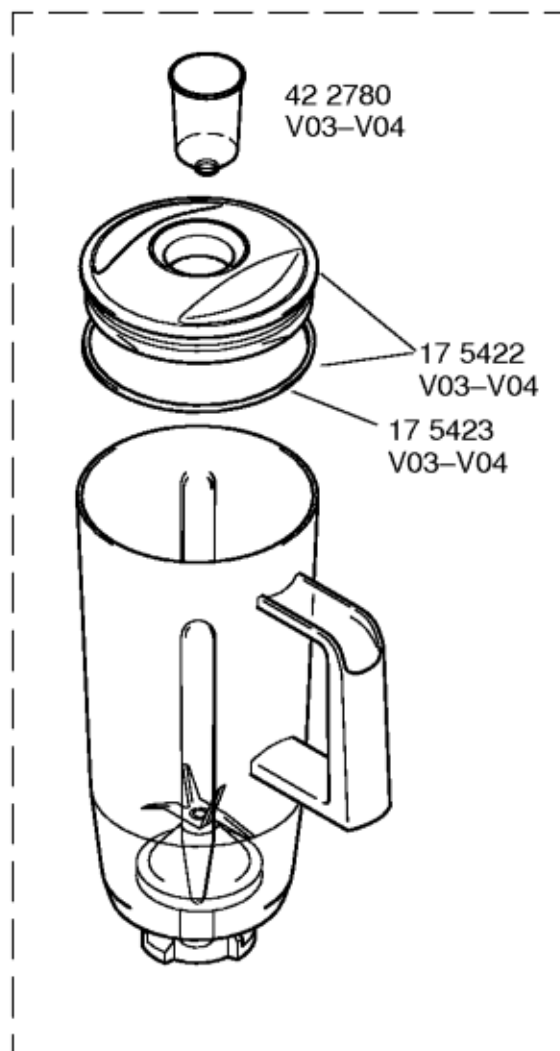


49 2025
V04,V05

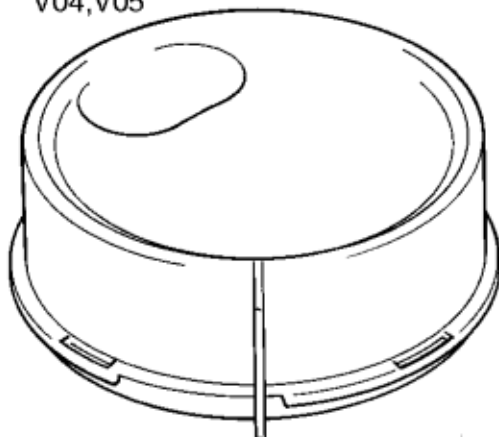


42 2781
V04,V05

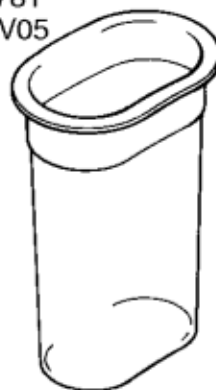

49 2027
V04,V05

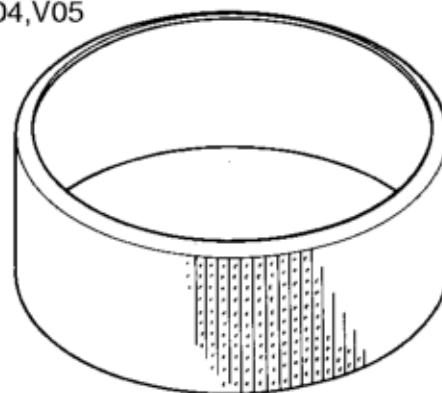


49 2023
V04,V05

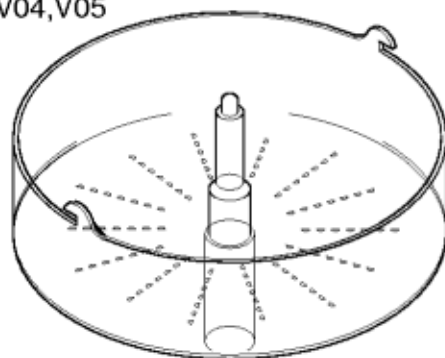

42 2788
V02,V04,V05

49 2028
V02,V04,
V05

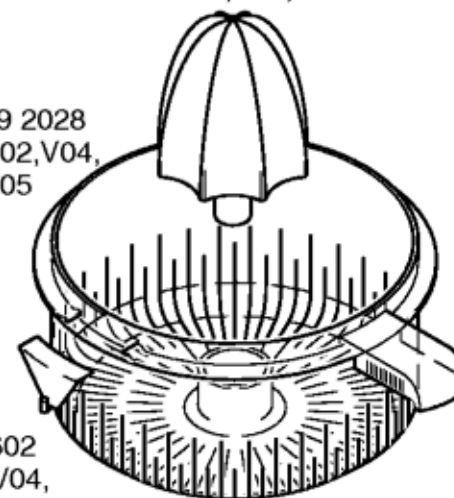

16 0602
V02,V04,
V05

Positionsnr	Ersatzteilnummr	Ersatz	Beschreibung
0001	00422760		Schalter
0002	00492013		Deckel
0003	00160613		Verriegelung-mechanisch
0004	00295328		Gehäuse
0005	00055088		Anschlusskabel
0006	00153962		Schalter
0007	00159998		Kohlebürste
0008	00267164	00642023	Motor
0009	00160601		Abdeckung
0010	00160603		Antriebsriemen
0011	00263870		Riemenscheibe
0012	00356223		Gehäuse-Unterteil
0013	00152047	10000212	Gummifuss
0014	00422778	00621924	Stößel
0015	00422774	11025978	Schüssel
0016	00492021	11025978	Schüssel
0017	00160602		Verriegelung-mechanisch
0018	00175417		Zahnrad / Stirnrad
0019	00096336	00650961	Messer
0020	00153961	00619675	Träger
0021	00096337	00650962	Scheibe
0024	00260973		Schneidscheibe
0042	00588141		Gebrauchsanleitung
8700	00401242	00403554	Küchenmaschine