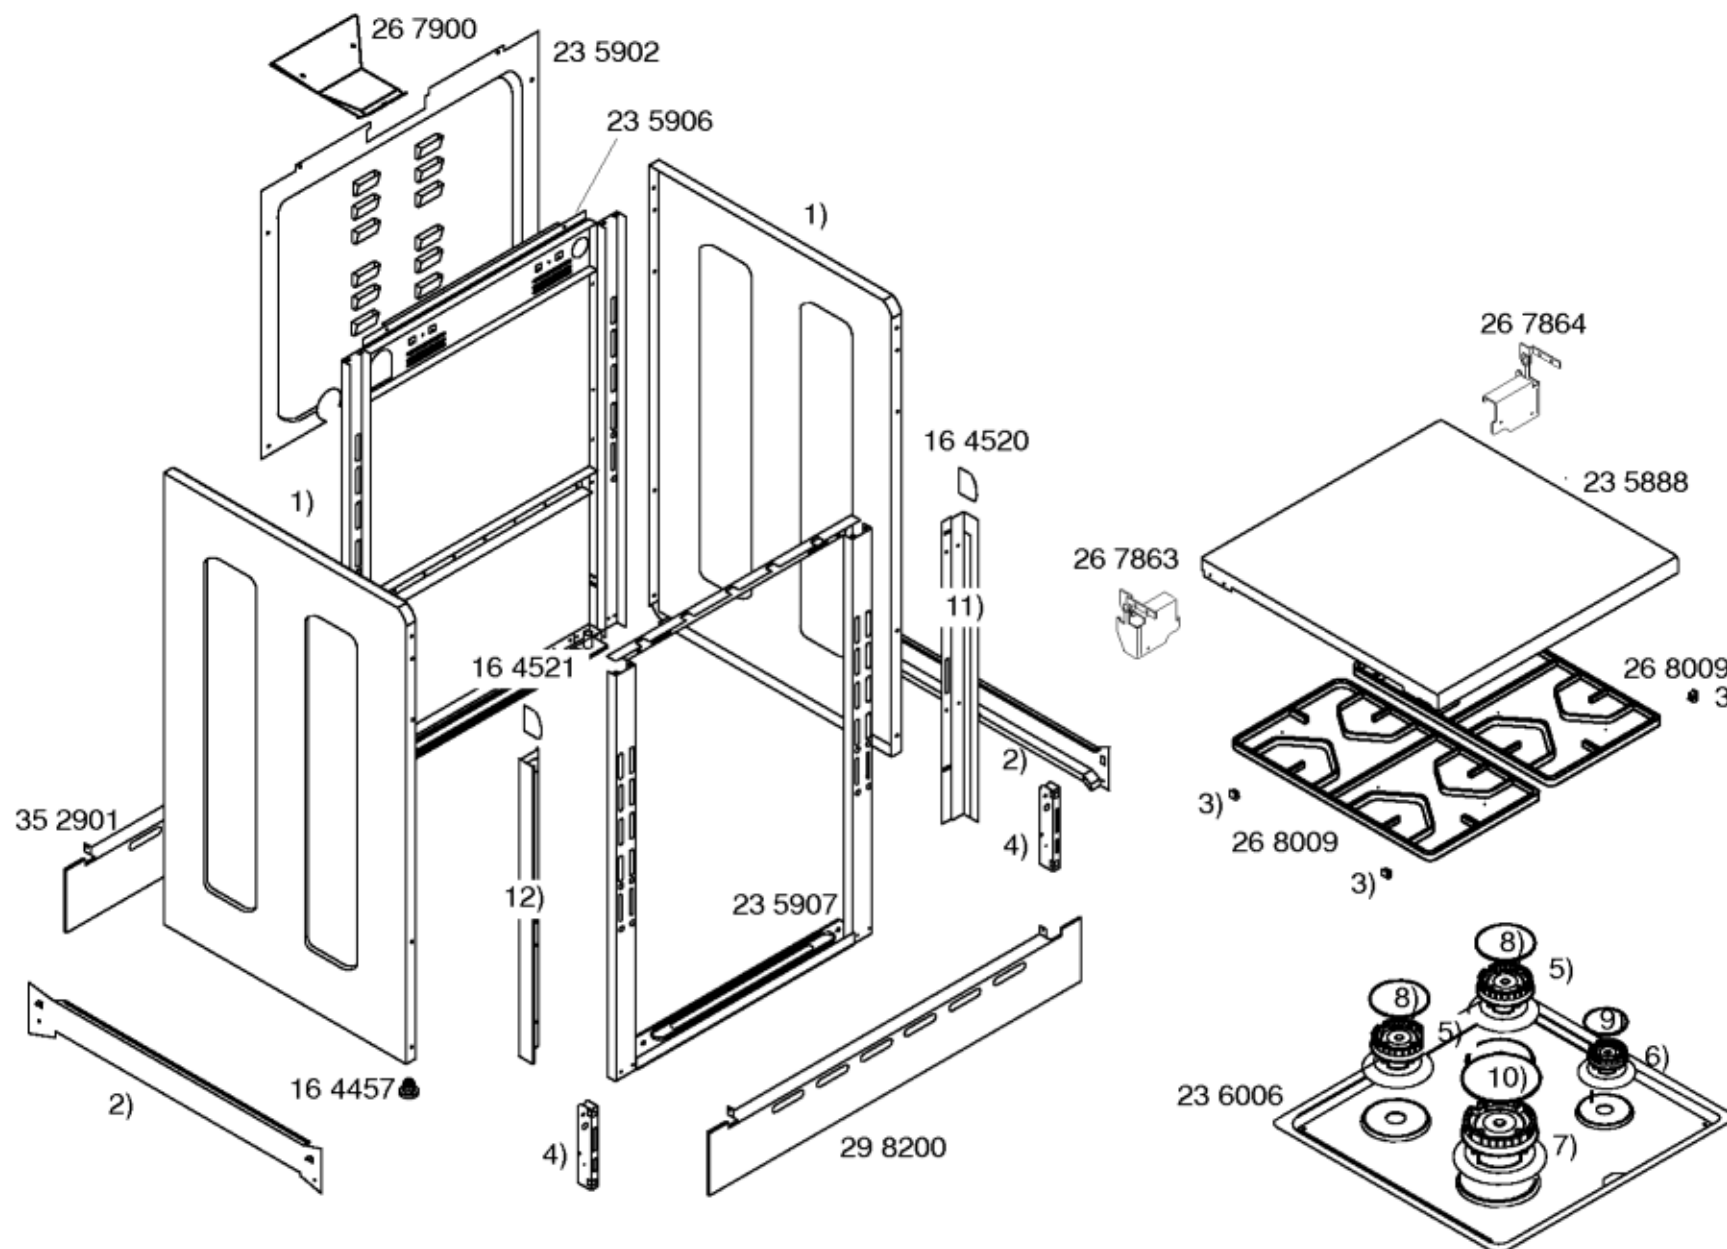




Mat. – Nr. – Konstante
3740

Gebrauchsanweisung
52 5724

- 1) 23 5905
V01,V02,V03,V04
23 6654
V05,V06,V07
- 2) 35 2493
- 3) 16 8053
- 4) 16 4414
V01,V02,V03,V04
18 3902
V05,V06,V07
- 5) 26 7357
- 6) 26 7359
- 7) 26 7356
- 8) 17 3897
- 9) 17 3898
- 10) 17 3896
- 11) 21 2790
V01,V02,V03,V04
21 7285
V05,V06,V07
- 12) 21 2791
V01,V02,V03,V04
21 7286
V05,V06,V07


Mat. – Nr. – Konstante
3740


- 1) 17 5919
2) 17 5717

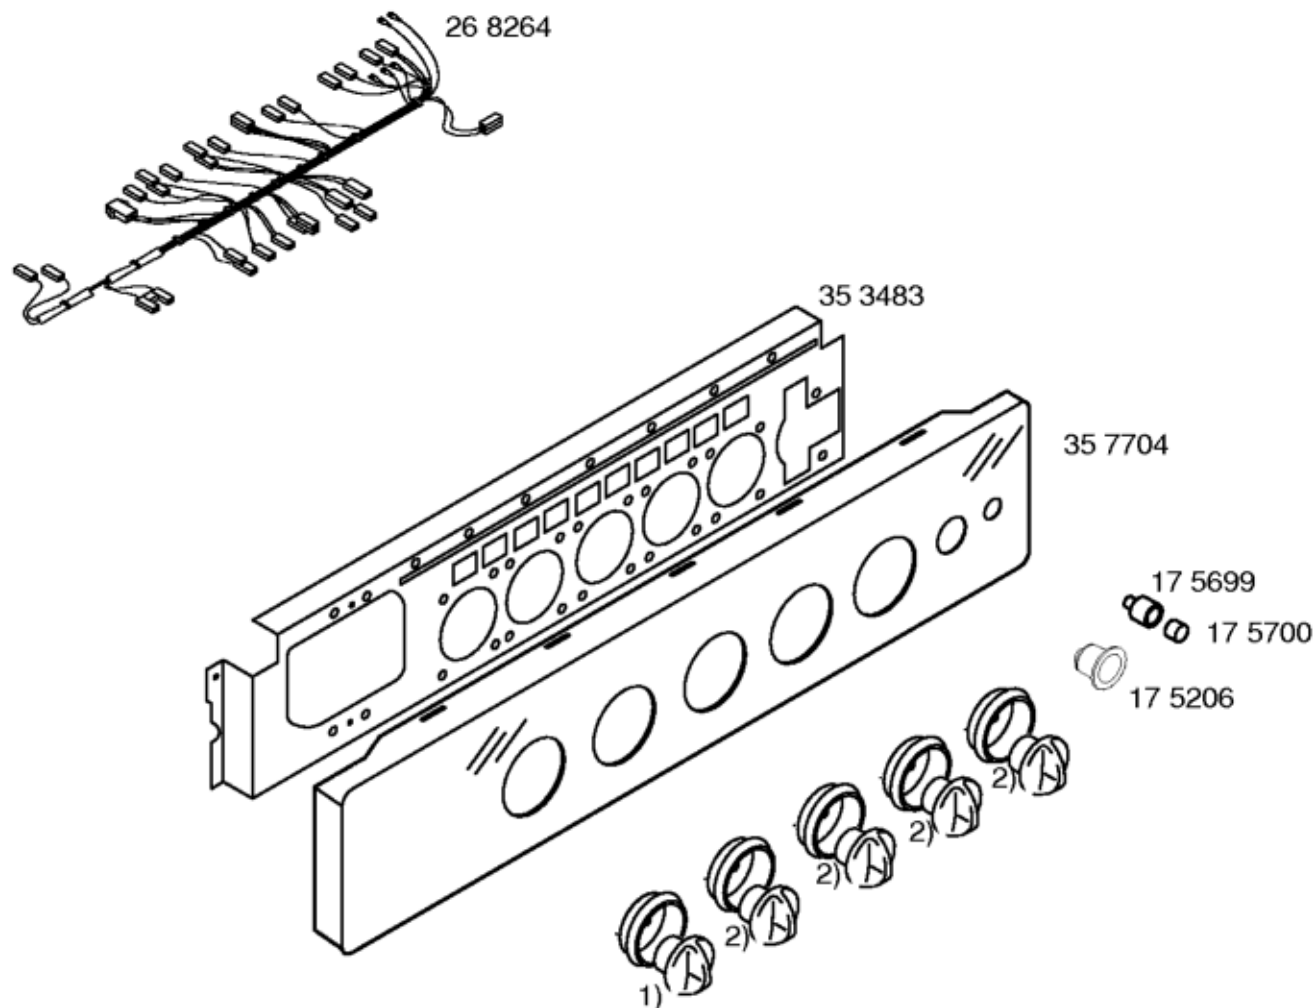


Mat. – Nr. – Konstante
3740

- 1) 35 3489
- 2) 35 1304
V01,V02,V03
- 3) 36 1183
V04,V05,V06,V07

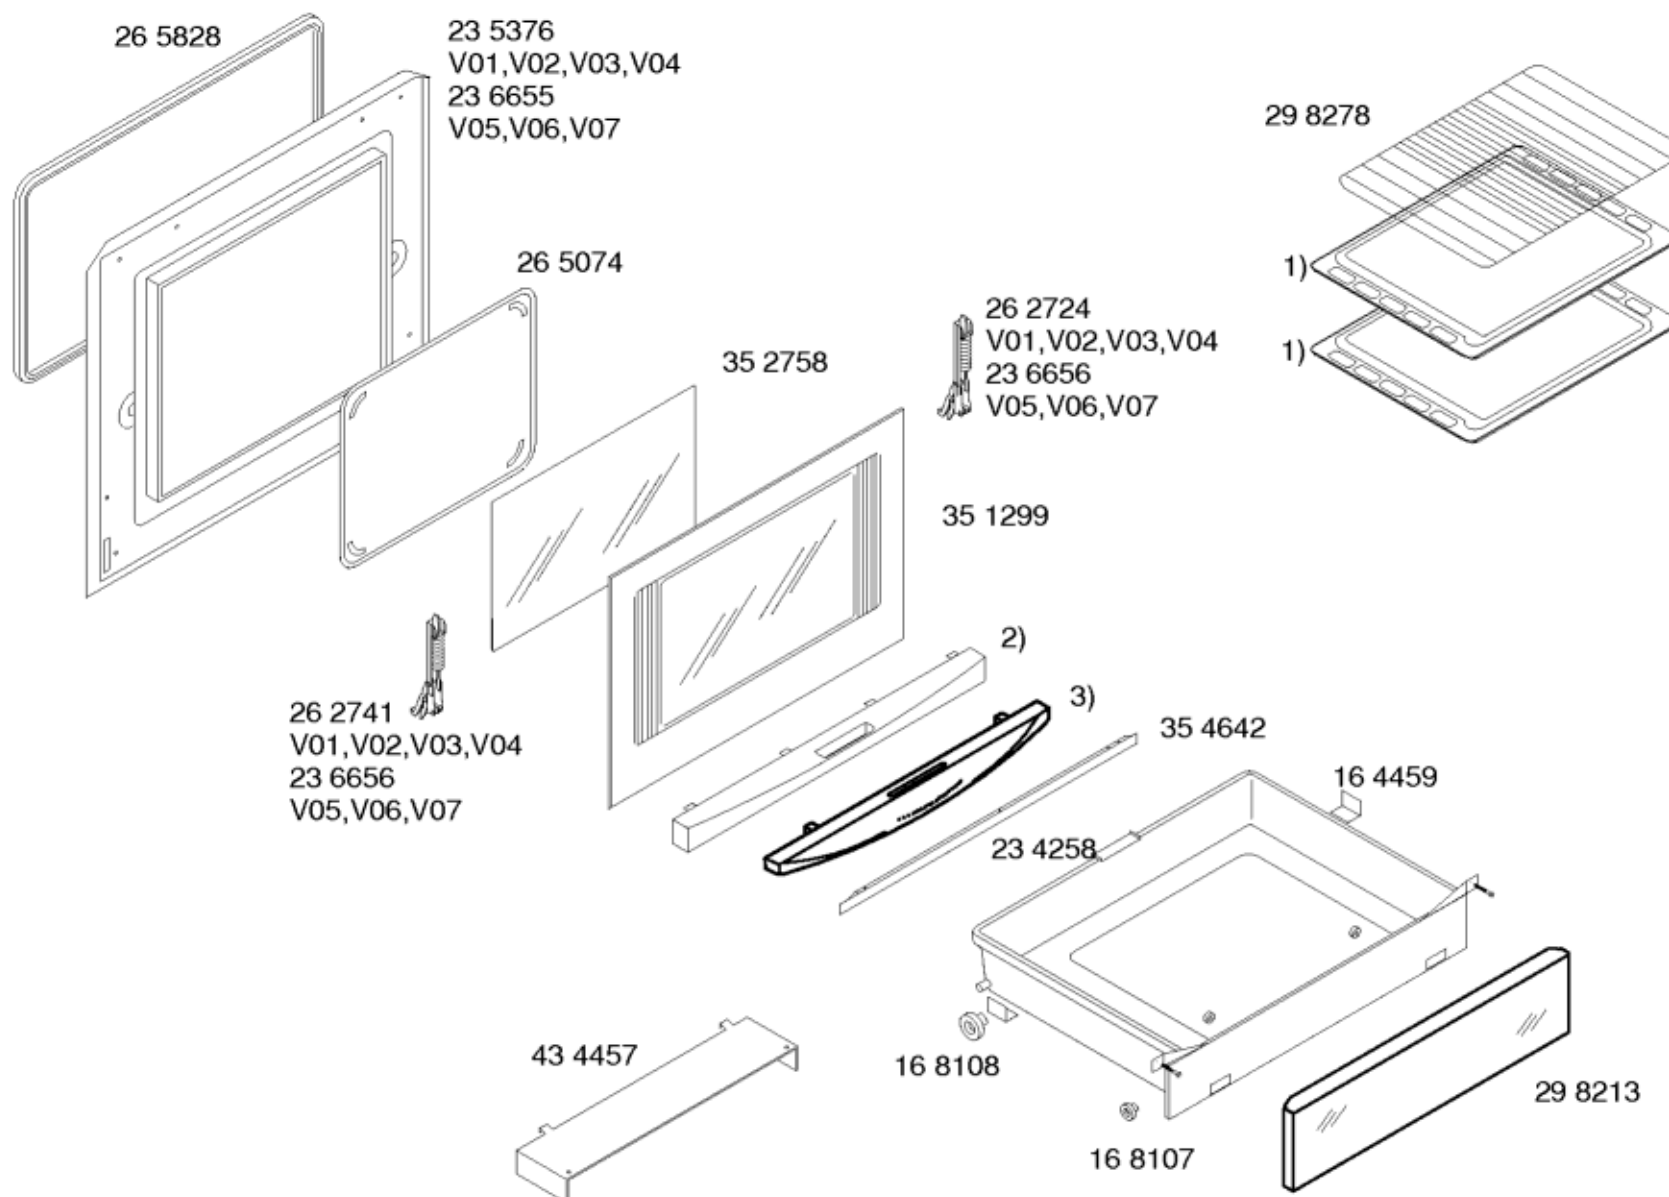

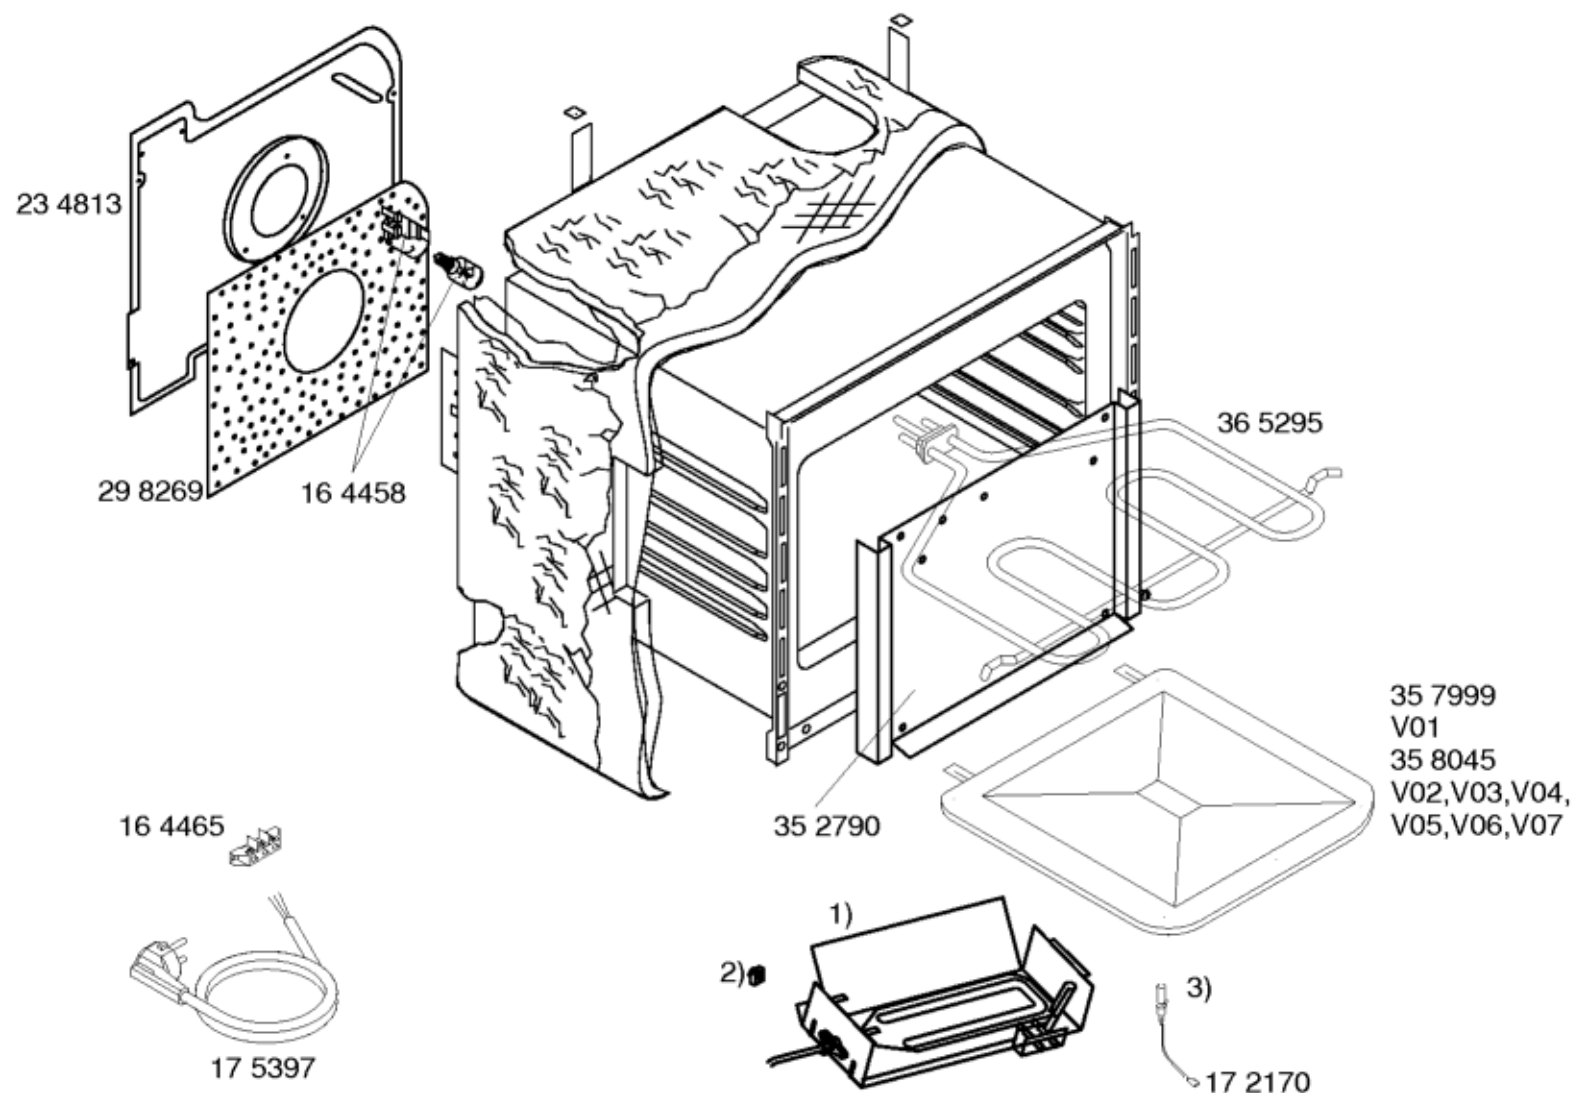
Mat. – Nr. – Konstante
3740

- 1) 21 4393
V01
26 8218
V02,V03,V04,V05
48 1794
V06,V07
- 2) 17 1604
V01
17 5690
V02,V03,V04,V05
V06,V07
- 3) 17 5159
V01,V02,V03,V04
V05
18 4041
V06,V07

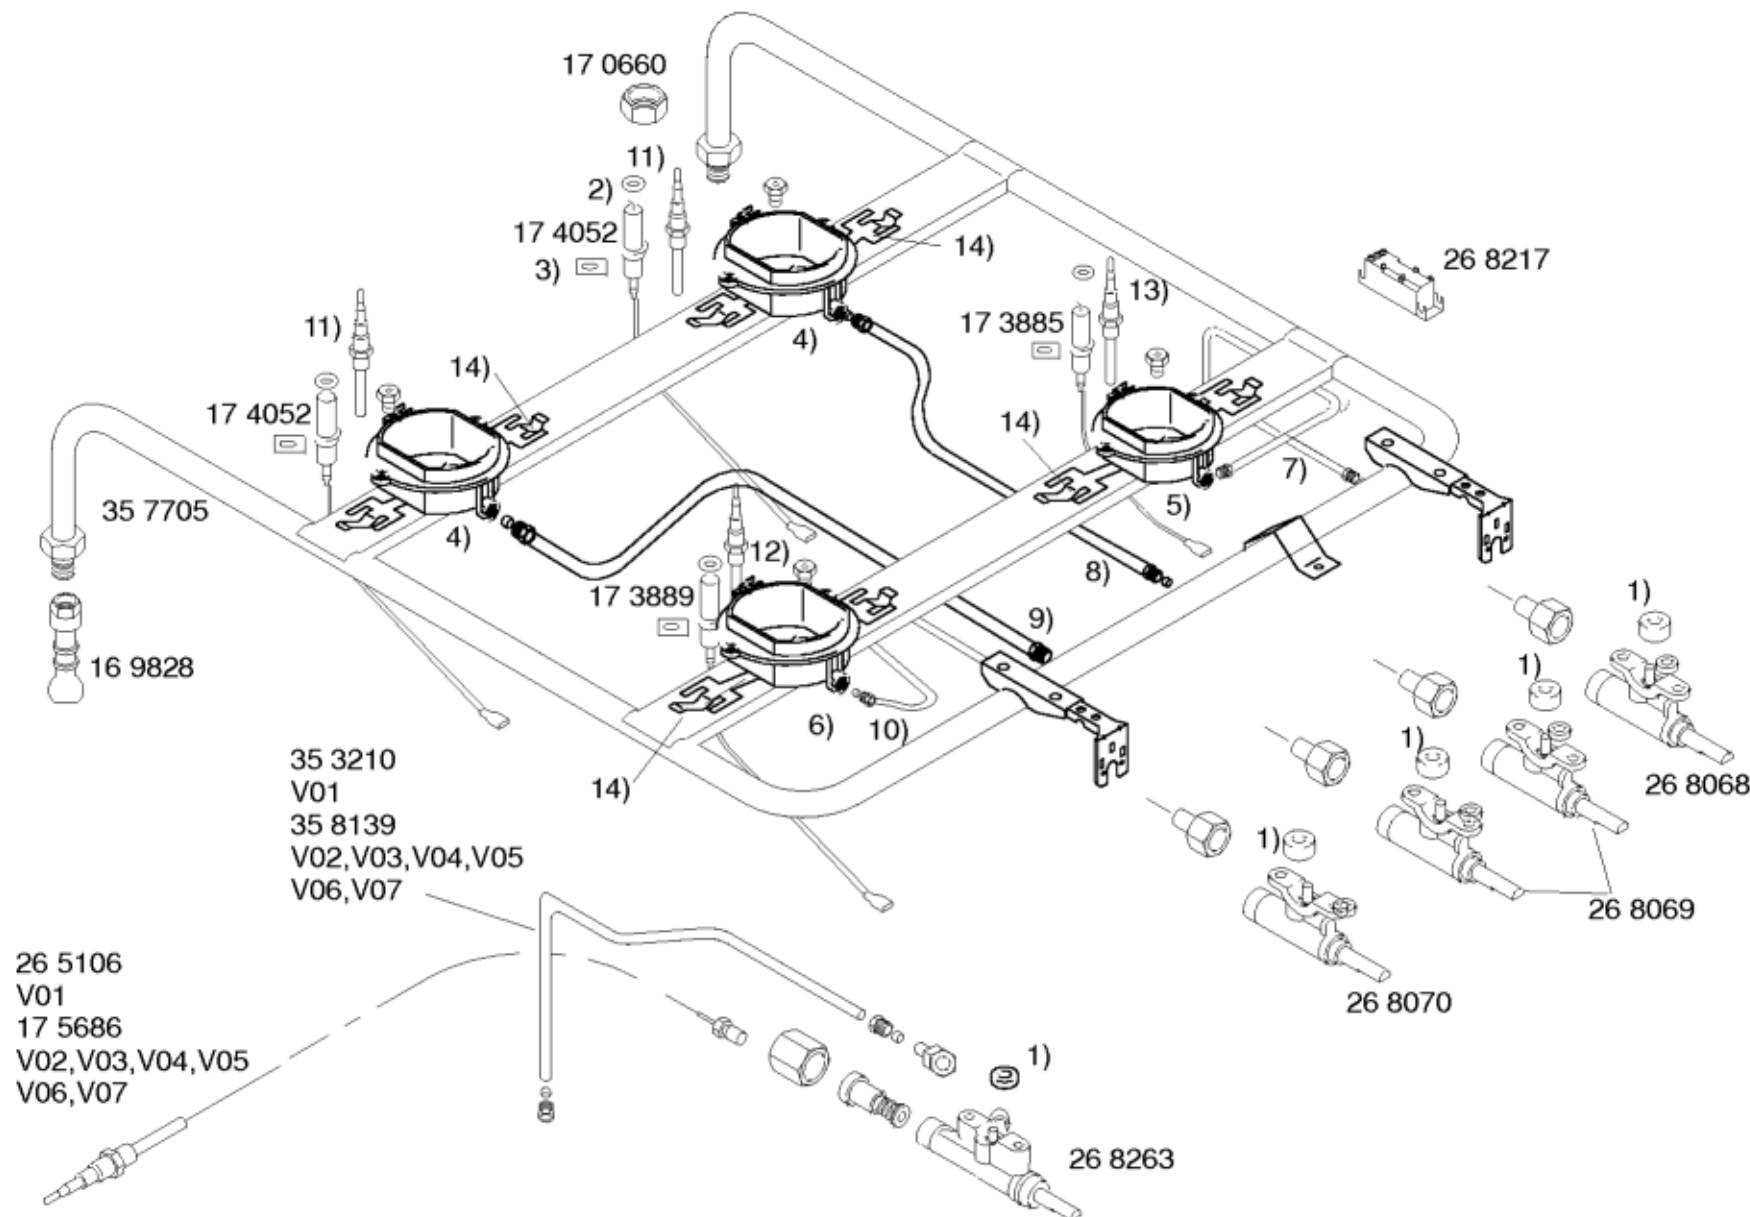Mat. – Nr. – Konstante
3740

- 1) 16 9339
 - 2) 17 3894
 - 3) 17 3895
 - 4) 26 7950
V01,V02
26 8642
V03,V04,V05
V06,V07
 - 5) 26 7951
V01,V02
26 8643
V03,V04,V05
V06,V07
 - 6) 26 7949
V01,V02
26 8641
V03,V04,V05
V06,V07
 - 7) 35 8189
 - 8) 35 8190
 - 9) 35 8188
 - 10) 35 8187
 - 11) 17 5432
 - 12) 17 5431
 - 13) 17 5430
 - 14) 17 4634
- Duesensatz Erdgas
17 5391
V01
17 5535
V02,V03,V04,V05
V06,V07
- Duesensatz
Fluessiggas
16 9912
V01
17 5534
V02,V03,V04,V05
V06,V07

Positionsnr	Ersatzteilnummr	Ersatz	Beschreibung
0001	00525724		Gebrauchsanleitung
0100	00164457		Fuss
0101	00352901		Blech
0102	00352493		Auszugschiene
0103	00236006		Tischplatte
0104	00164521		Lagerbock
0105	00164520		Lagerbock
0106	00267900		Blech
0107	00168053		Auflage
0108	00212790		Rahmen
0109	00212791		Rahmen
0110	00235905		Gehäuseseitenteil
0111	00267863		Deckelscharnier
0112	00267864		Deckelscharnier
0113	00268009	00444739	Gitter
0114	00164414		Scharnier
0115	00173896		Brennerdeckel
0116	00173897		Brennerdeckel
0117	00173898		Brennerdeckel
0118	00235888		Abdeckung
0119	00235902		Gehäuse-Rückteil
0120	00267356		Brennerkopf
0121	00267357		Brennerkopf
0122	00267359		Brennerkopf
0123	00235907		Leiste
0124	00235906		Gehäuseteil
0125	00298200		Blech
0200	00175699		Ring

0201	00175700		Taste
0202	00175717		Drehgriff-Kochstelle
0203	00175718		Drehgriff-Kochstelle
0204	00268264		Kabelbaum
0205	00357704		Bedienblende
0206	00353483		Blech
0207	00175206		Taste
0300	00352758		Glasscheibe
0301	00351299		Frontglasscheibe
0302	00262724		Scharnier
0303	00262741		Scharnier
0304	00164459		Rolle
0305	00168108		Rolle
0306	00168107		Rolle
0307	00351304		Türgriff
0308	00298278		Bratrost
0309	00235376		Innentür
0310	00354642		Halter
0311	00353489	00442422	Backblech emailliert
0312	00265074		Dichtung
0313	00265828		Dichtung
0314	00298213		Abdeckung
0315	00234258		Schubkasten
0400	00175397		Anschlusskabel
0401	00298269		Isolierteil
0402	00164465		Klemme
0403	00172170		Draht
0404	00164458		Lampengehäuse
0405	00175159		Zündkopf

0406	00234813		Blech
0407	00358045		Blech
0408	00352790		Blech
0409	00175690		Halter
0410	00268218		Brenner
0500	00169828	12015189	Adapter
0501	00358139		Brennerrohr
0502	00268068	00493859	Gashahn
0503	00268069	00493858	Gashahn
0504	00268070	00493857	Gashahn
0505	00175430	00424847	Thermoelement
0506	00175431	00424847	Thermoelement
0507	00175432	00424847	Thermoelement
0508	00173885		Zündkopf
0509	00173889	00174052	Zündkopf
0510	00174052		Zündkopf
0511	00358187		Brennerrohr
0512	00358188		Brennerrohr
0513	00358189		Brennerrohr
0514	00358190		Brennerrohr
0515	00268263		Gashahn
0516	00173894		Dichtung
0517	00175686		Thermoelement
0518	00268217		Zündtransformator
0519	00267949		Brennerkelch
0520	00267950		Brennerkelch
0521	00267951		Brennerkelch
0522	00357705		Hahngalerie
0523	00170660	12015190	Stopfen

0524	00169339		Dichtung
0525	00173895		Simmerring
0526	00175534		Düsensatz Flüssiggas
0527	00175535		Düsensatz Erdgas
0528	00174634		Feder
0529	00174648	00174634	Feder
0530	00174649	00174634	Feder
0532	00365295		Widerstand
0250	00425604		Magnetventil
0199	00628649		Düse