


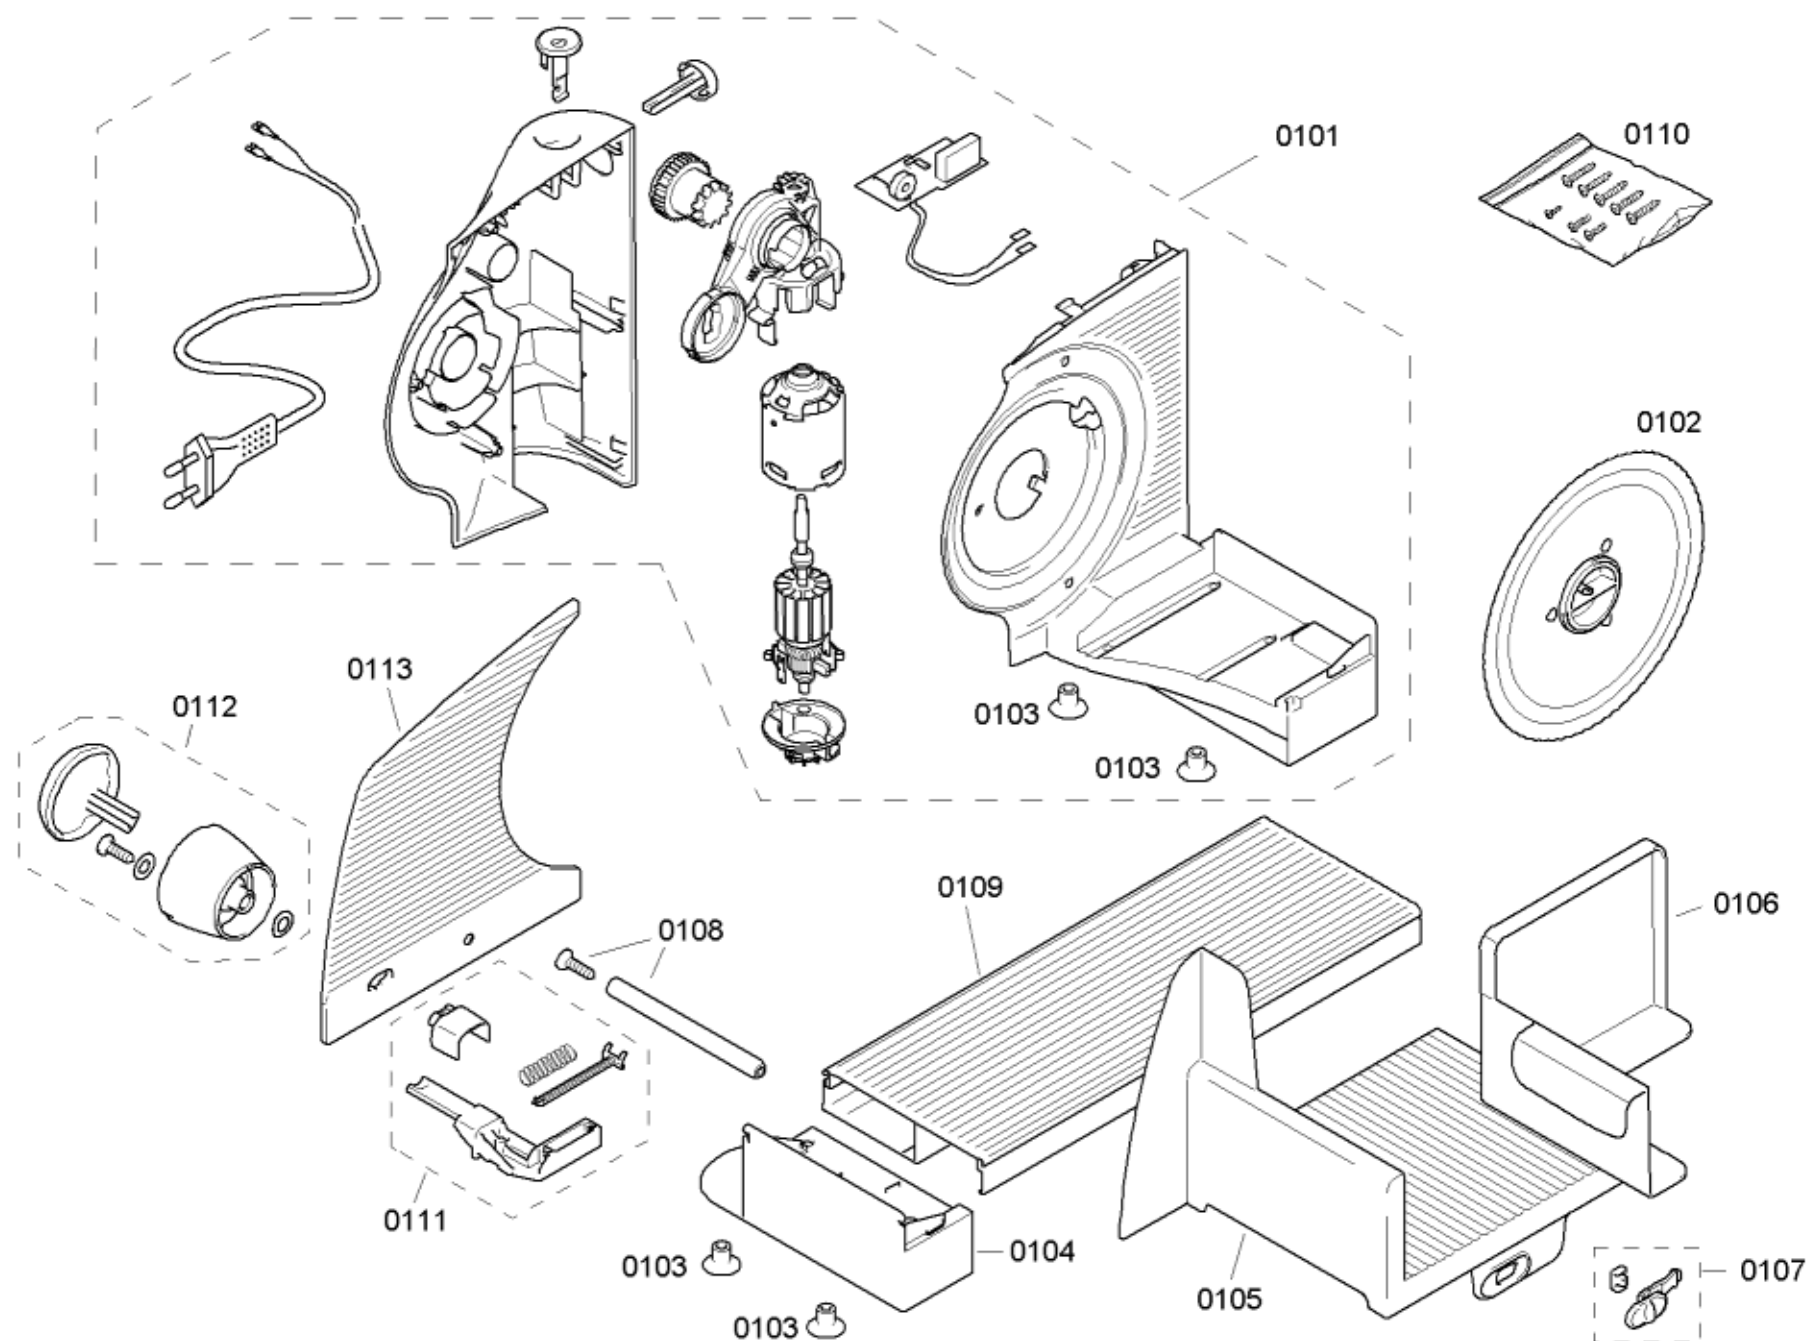

Positionsnr	Ersatzteilnummr	Ersatz	Beschreibung
0101	00661876	11014304	Antrieb
0102	00640062	12012080	Messer
0103	00604465	10000212	Gummifuss
0104	00641447		Fuss
0105	00641444	11014088	Schlitten
0106	00641446	12012181	Halter
0108	00604584	10000296	Stift
0109	00449243		Tisch
0110	00604580	10000297	Schraubensatz
0111	00604257	10000298	Führung
0112	00604238	10000299	Drehgriff
0113	00641445	12012184	Anschlag
8400	00699243	00733676	Gebrauchsanleitung
0107	00614675	10000295	Schieber
8800	00402015	00405882	Allesschneider