


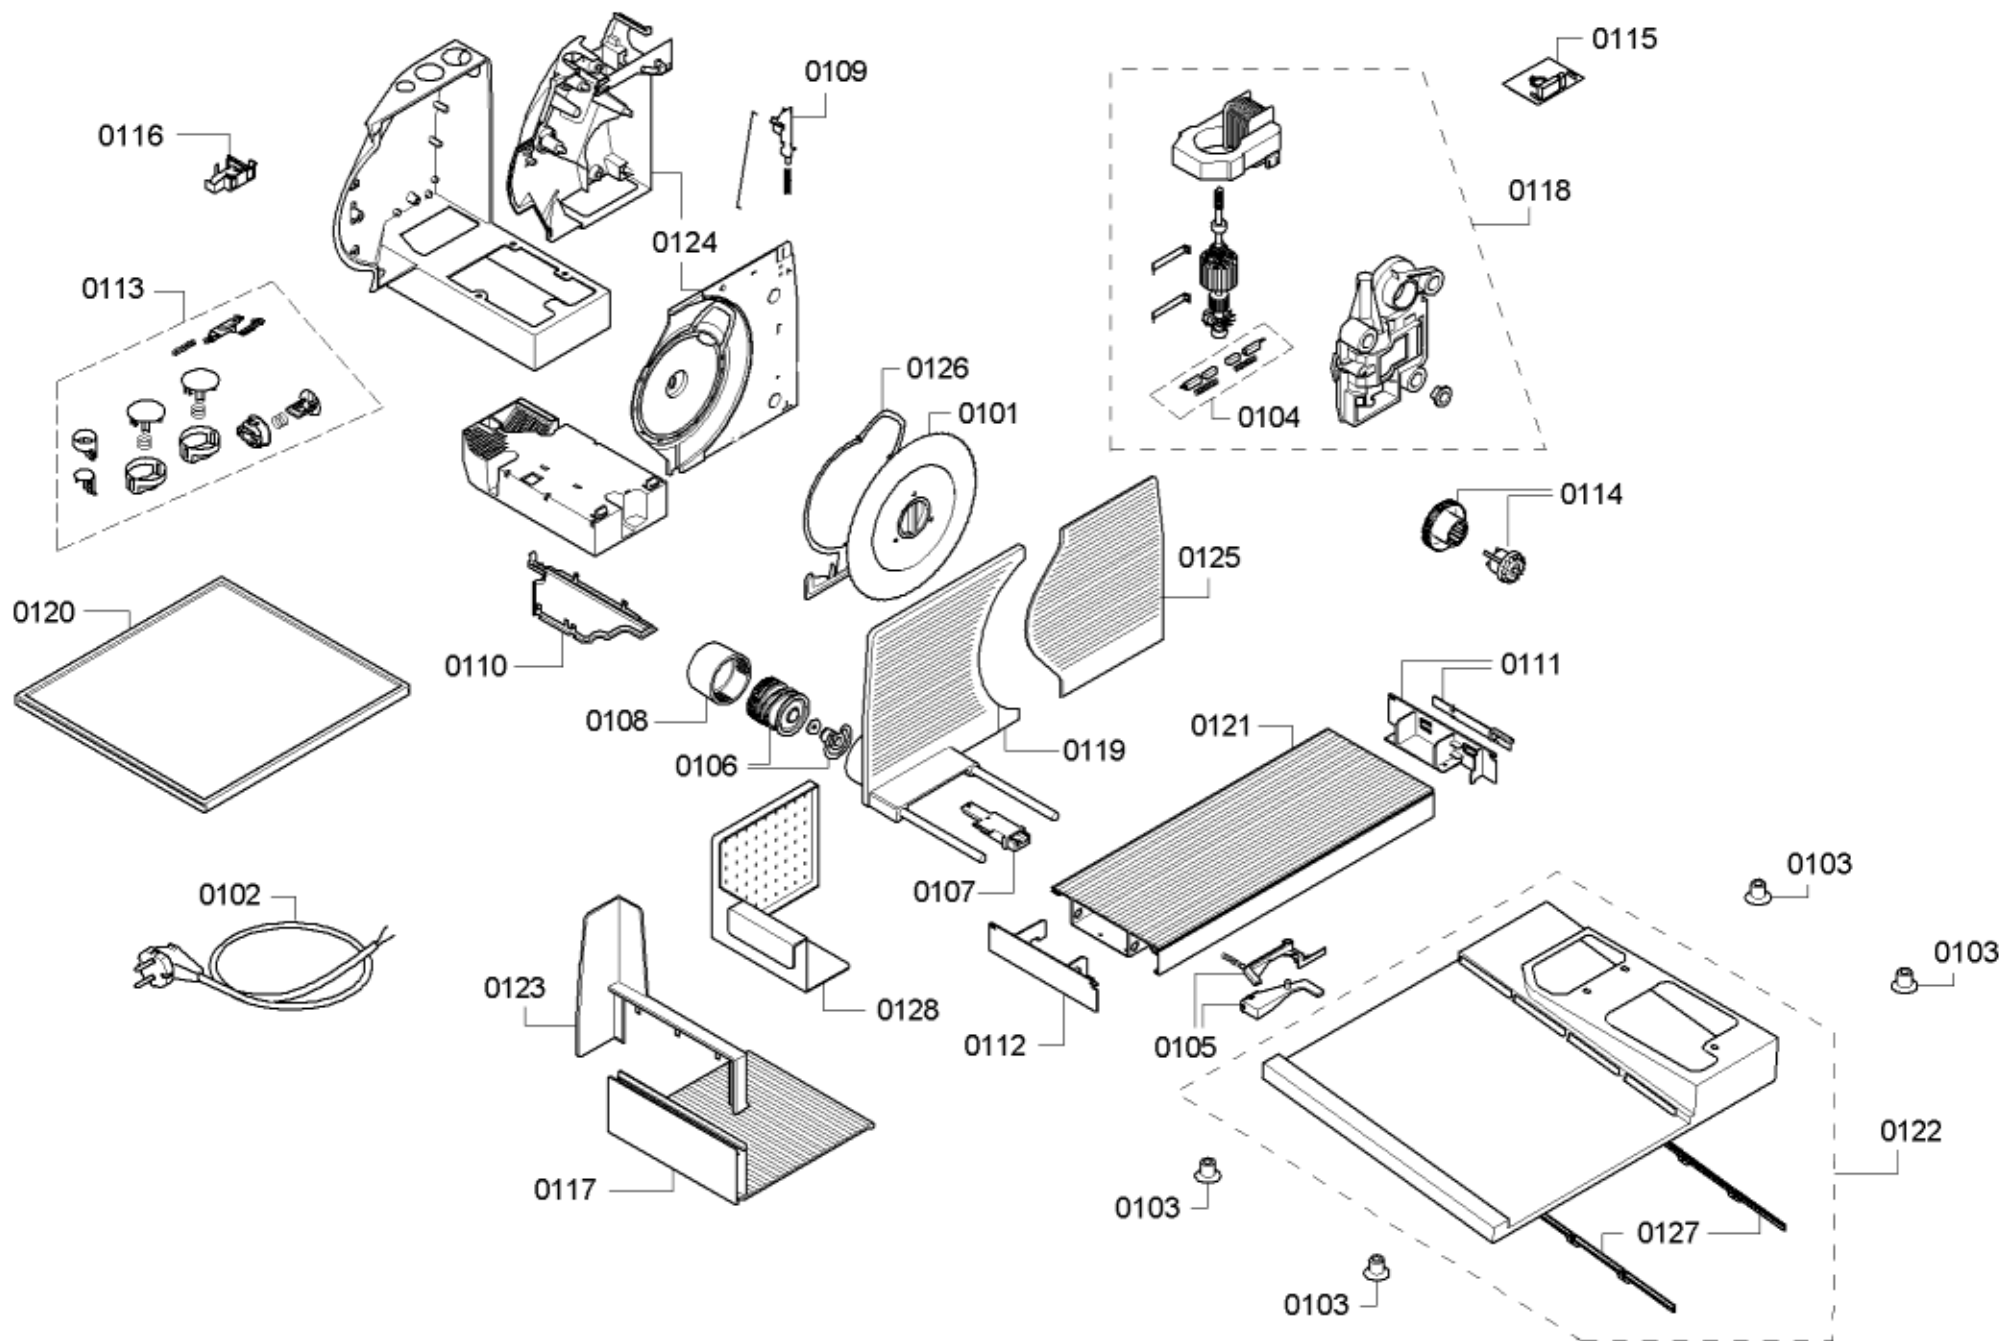

Positionsnr	Ersatzteilnummr	Ersatz	Beschreibung
0101	00095288	12012078	Messer
0102	00055088		Anschlusskabel
0103	00152047	10000212	Gummifuss
0104	00174061	10000215	Kohlebürste
0105	00174234	10000218	Hebel
0106	00174236	10000219	Ring
0107	00174237	10000220	Haken
0108	00174238	10000261	Drehgriff
0109	00174489	10000262	Schieber
0110	00174515	10000263	Deckel
0111	00174748	12012149	Abdeckung
0112	00174754		Abdeckung
0113	00174762		Tastensatz
0114	00182025	10000160	Zahnrad / Stirnrad
0115	00622346	10000266	Motorsteuerungsmodul
0116	00183904	10000267	Träger
0117	00267636	11014047	Schlitten
0118	00267642	10000224	Motor
0119	00267747	11014058	Anschlag
0120	00267751	12012150	Schale
0121	00364823	11014059	Tisch
0122	00366267	11014060	Fuss
0123	00481136	12012152	Bügel
0124	00483690	10000271	Träger
0125	00483727	10000272	Abdeckung
0126	00483733	10000273	Ring
0127	00483734	12012151	Führung
0128	00491085	12012126	Halter

8400	00525147	00733678	Gebrauchsanleitung
------	--------------------------	--------------------------	--------------------