










0199

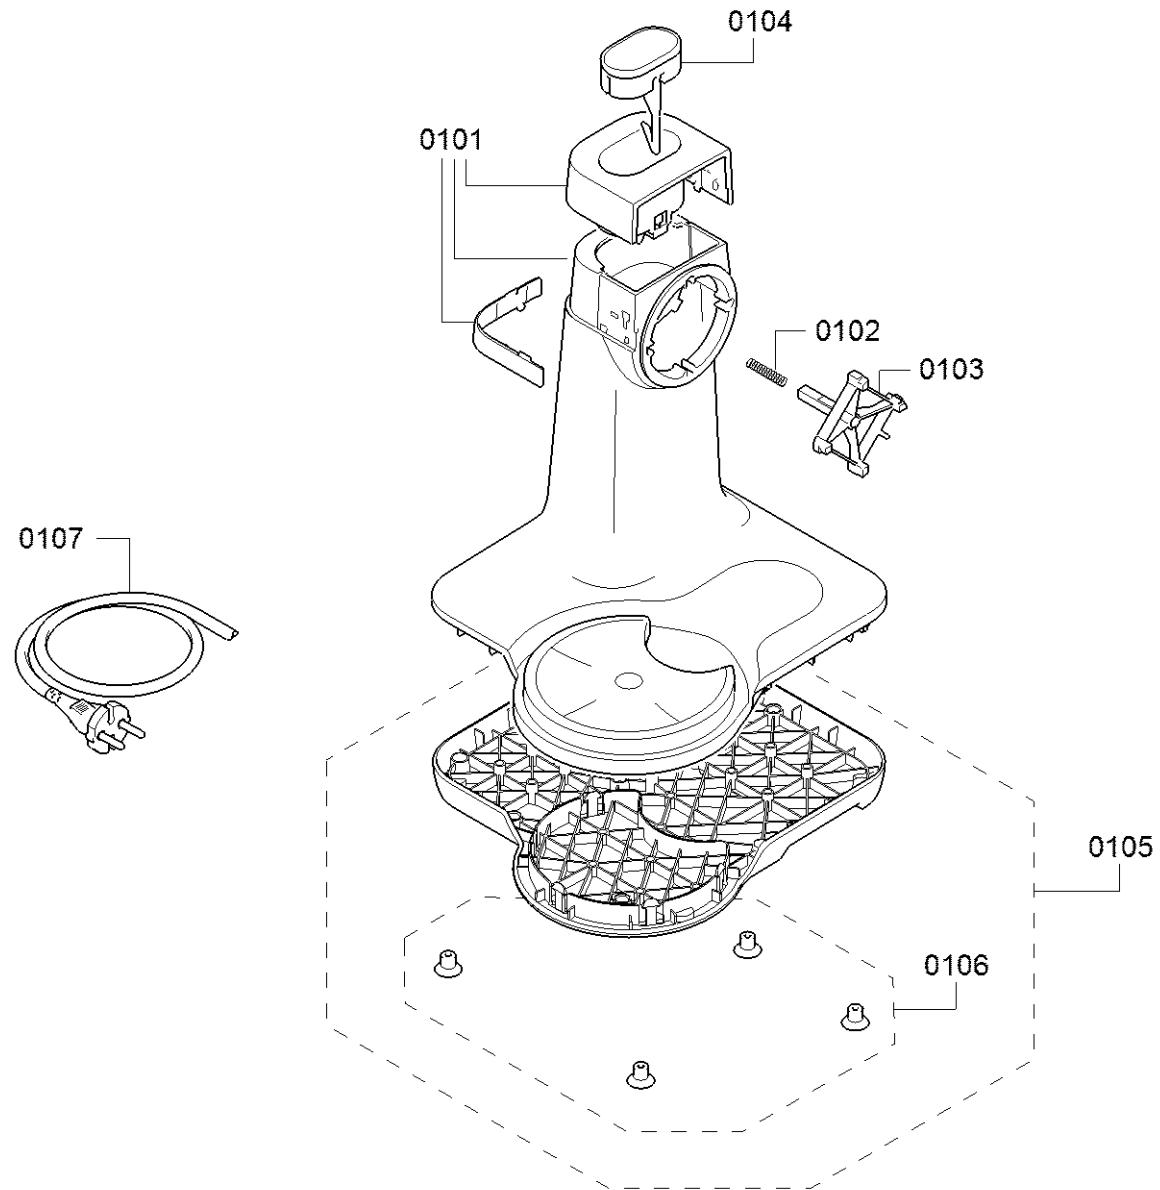


Positionsnummer	Ersatzteilnummer	Ersatz	Beschreibung
0101	11039304		Ház
0102	00020655		Madártoll
0103	10015006		tartó
0104	10015028		gomb
0105	11039331		Lakásbázis
0106	10000212		Gumi láb
0107	00656825		Csatlakozó kábel

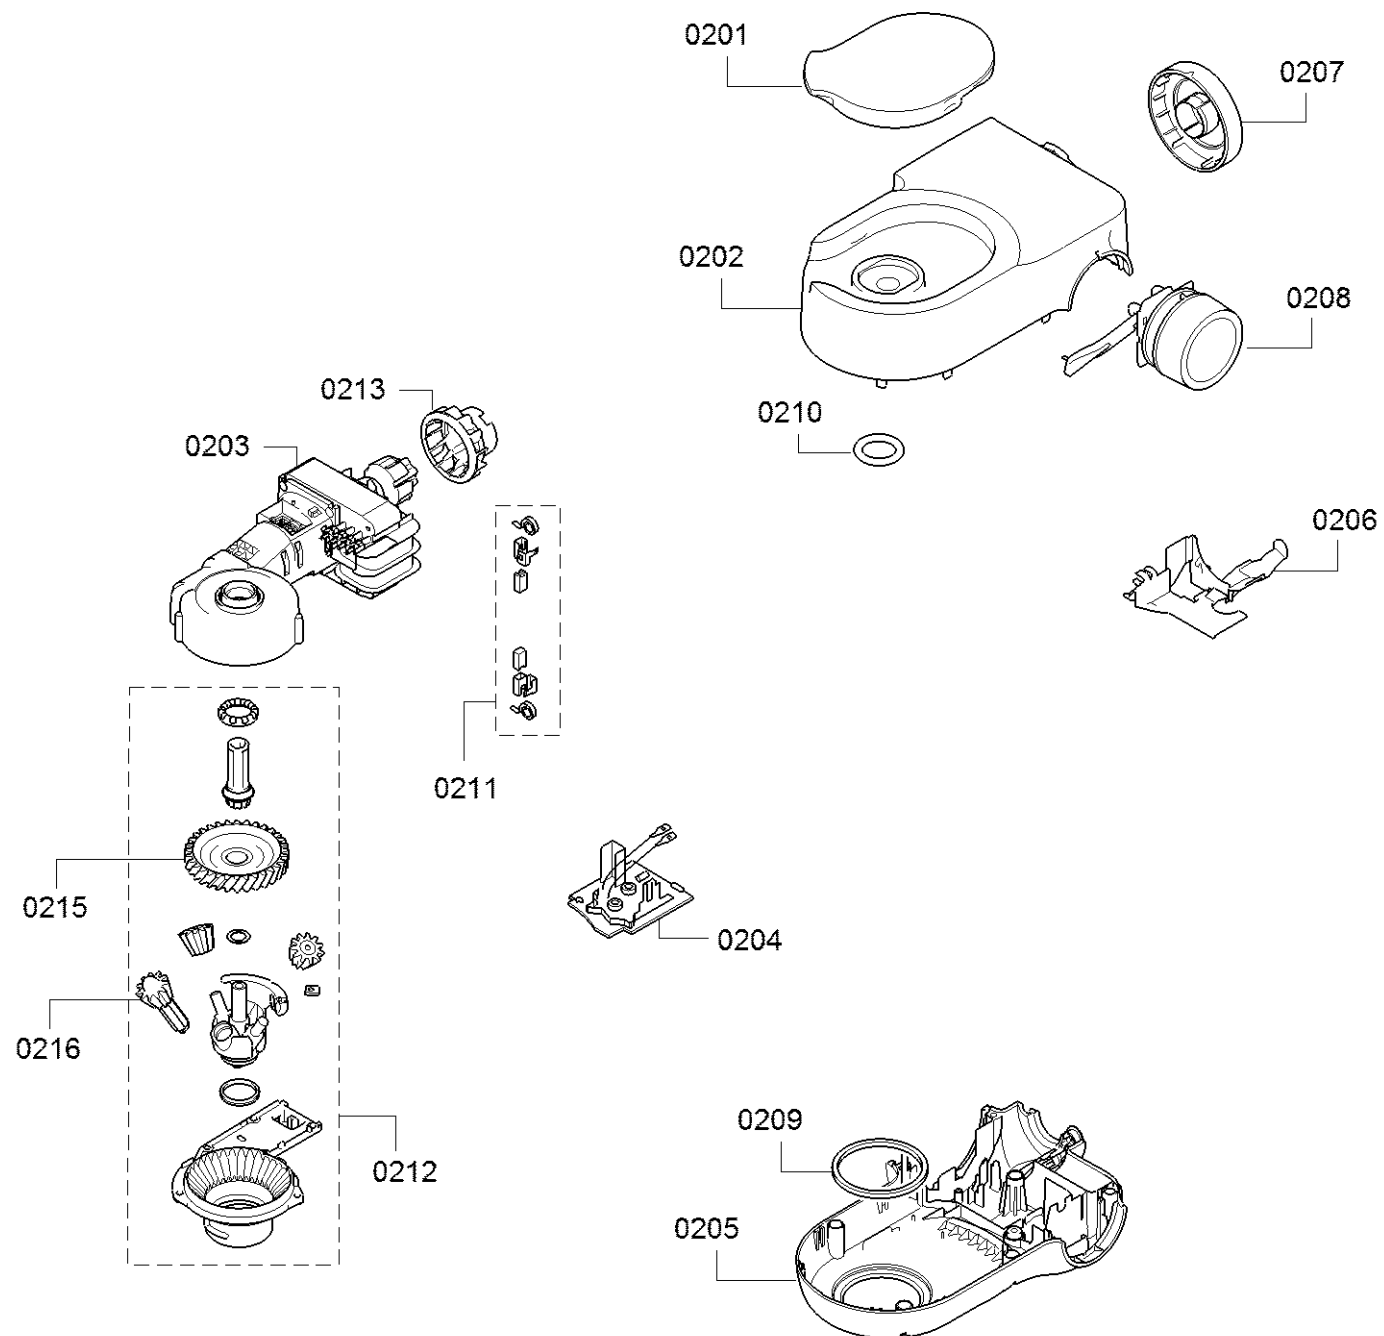

Positionsnummer	Ersatzteilnummer	Ersatz	Beschreibung
0201	10015022		Fedél
0202	11039325		Lengőkar
0204	10014994		Motorvezérlő modul
0205	11039329		Lengőkar
0206	10015023		Fedél
0207	10002502		Fedél
0208	10014995		Forgó fogantyú
0209	10004647		pecsét
0210	00020659		pecsét
0211	00638020		Szénkefe
0203	11052445		Motor
0212	12042434		Készlet
0213	10026707		Ventilátorkerék
0215	10028563		Gear/Spur Gear
0216	10028562		kúpkerék

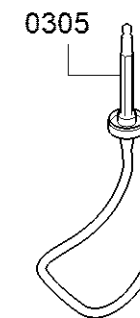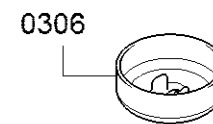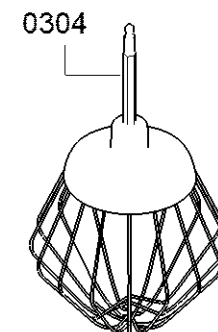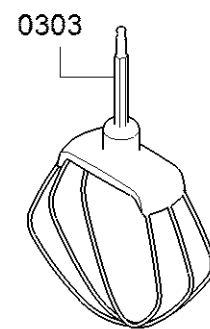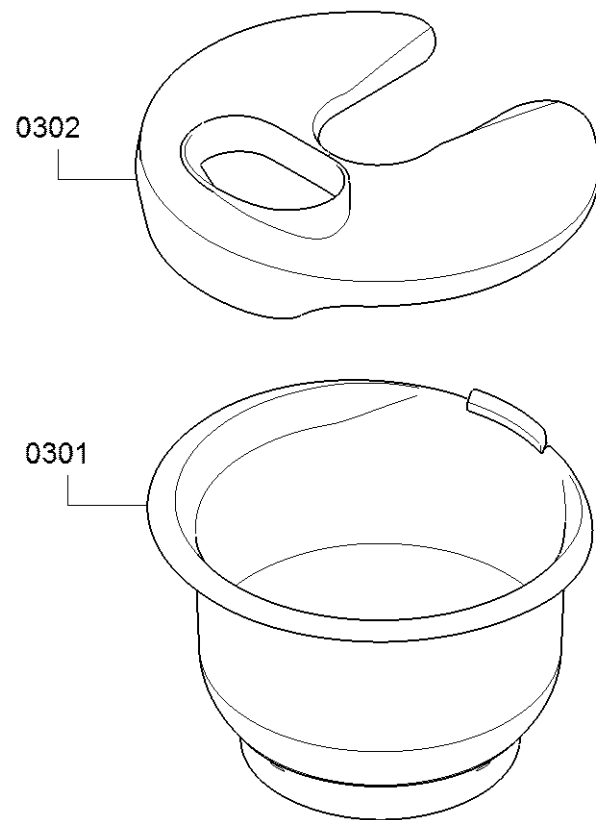

Positionsnummer	Ersatzteilnummer	Ersatz	Beschreibung
0301	11039341		Csere keverőtál
0302	12034497		Fedél
0303	00650542		Legyintés
0305	00080060		téztahorog
0306	00619166		Terelő
0304	00650543		Legyintés

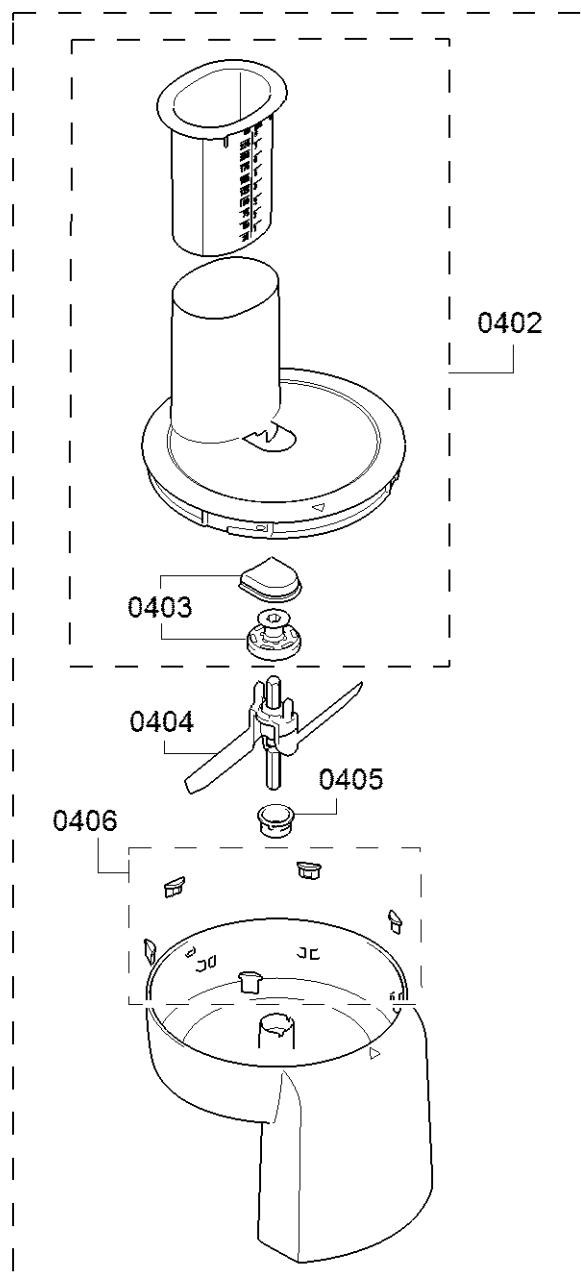

0401


0402

0403

0404

0405

0406

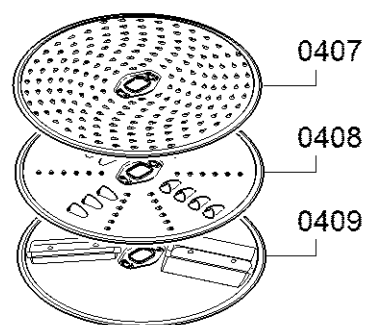


0407

0408

0409

0414

0413

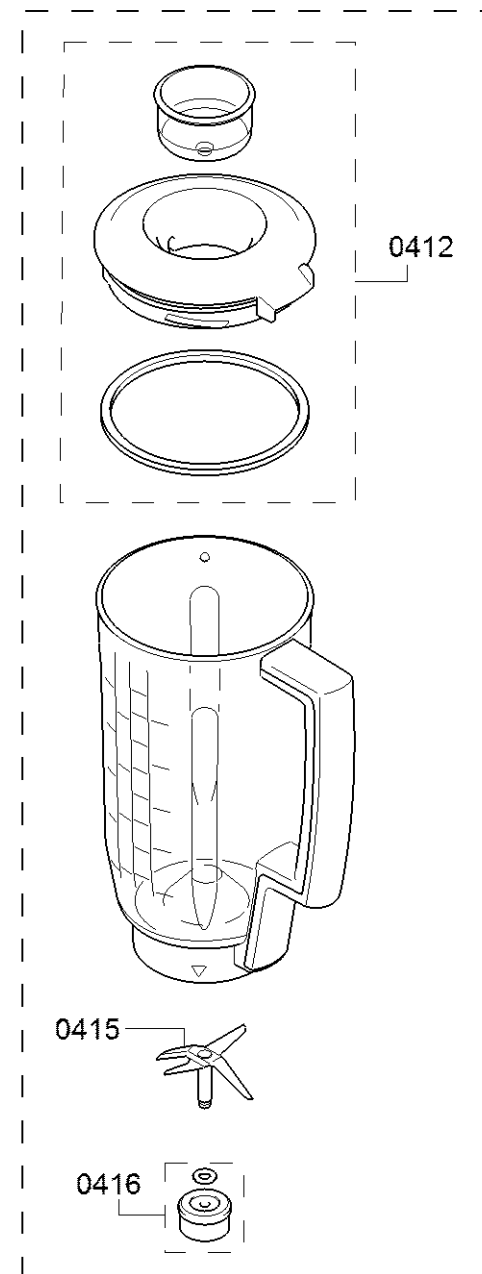


0410

0412

0415

0416

Positionsnummer	Ersatzteilnummer	Ersatz	Beschreibung
0402	12013003		Ház teteje
0403	00032884		csatolás
0404	00630760		átvevő
0405	00630767		foglalat
0406	00621922		Vezetés
0407	00080159		Súrlódó tárcsa - tartozékok
0408	00083577		Rasp megfordítható tárcsa durva/finom
0409	00642221		Vágókorong - tartozékok
0410	12014969		Keverő tartozék - tartozékok
0412	10005576		Fedél
0415	00622178		Kés
0416	00622179		átvevő

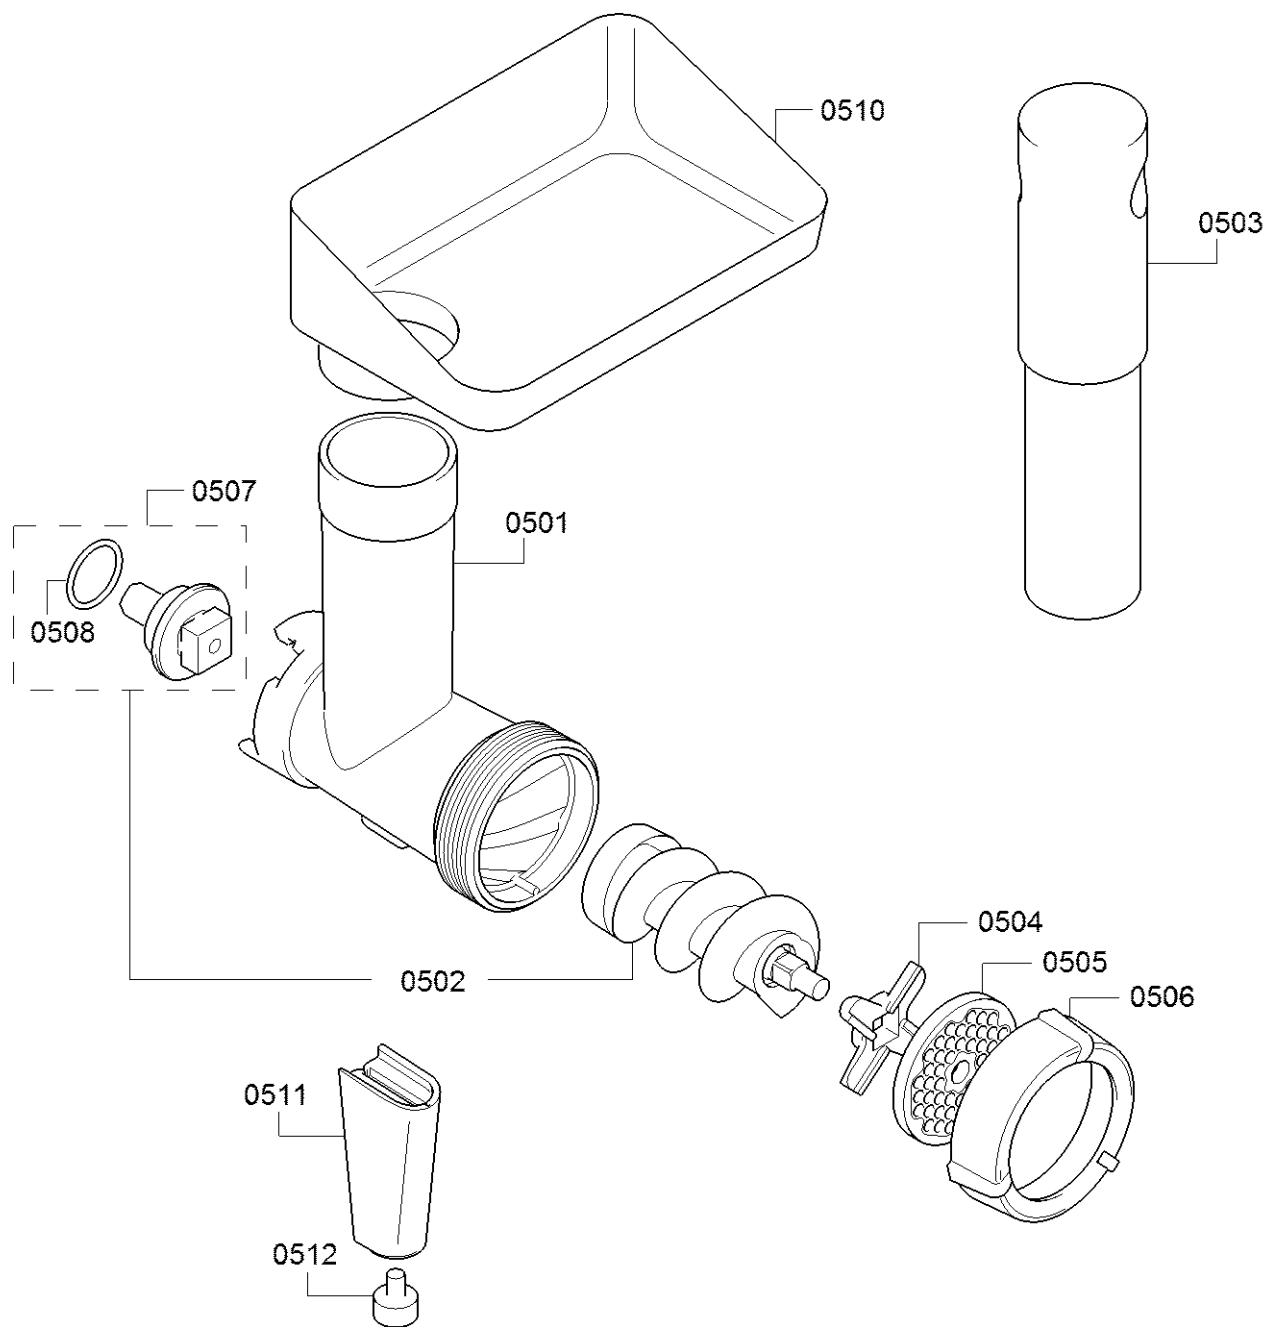

Positionsnummer	Ersatzteilnummer	Ersatz	Beschreibung
0501	00262066		Ház
0502	00050366		szállítócsiga
0503	00650682		Stuffer
0504	00620949		Kés
0505	00620950		Perforált tárcsa - tartozékok
0506	00050365		csavaros gyűrű
0507	00020470	00418076	csatolás
0508	00028277		pecsét
0510	00652175		Töltőtál
0512	00029643	10002430	Láb
0511	00620948		Láb